

CONTENTS

Description	Page No.
INTRODUCTION	
Delivery report (to be filled in when the tractor is delivered).....	Inside front cover
Orientation.....	2
Serial numbers, engine and tractor.....	2
DESCRIPTION	
Before starting the tractor.....	6, 7
Instruments and controls.....	4 to 6
Preparing your tractor for each day's work.....	7
Views of the tractor.....	3
OPERATING YOUR TRACTOR	
Driving the tractor.....	10
Operating the belt pulley and power take-off.....	13
Operating the engine.....	8 to 10
LUBRICATION	
General engine lubrication.....	14
Greasing the front wheels.....	16
Lubricating oil and grease specifications.....	16, 17
Lubrication guide.....	18 to 22
Oil filter.....	14, 15
MAINTENANCE	
Adjustable front axle.....	53
Air cleaning system.....	28, 29
Battery ignition unit.....	33 to 35
Brakes.....	48
Carburetor.....	24
Clutch.....	47
Cold weather precautions.....	25, 26
Cooling system.....	26 to 28
Cutaway view of tractor.....	22
Drawbar and hitch.....	49, 50
Fuel strainer.....	25
Magneto.....	30 to 32
Minor engine service operations.....	46
Periodic inspections.....	23
Pneumatic tires.....	53 to 55
Seat.....	50
Seed plate drive.....	55
Spark plugs and cables.....	29, 30
Starting and lighting equipment (with battery ignition and voltage regulation).....	40 to 46
Starting and lighting equipment (with magneto and voltage regulation).....	36 to 39, 44
Trouble shooting.....	56 to 59
Valve clearance adjustment.....	46
Wheels.....	50 to 52
STORING AND HOUSING YOUR TRACTOR.....	60
SPECIAL ATTACHMENTS.....	61 to 69
SPECIFICATIONS.....	70, 71
INDEX.....	72, 73