


MAINTENANCE


To raise or lower the drawbar, remove bolts "B" (*Illust. 50*), and raise or lower the drawbar to the upper or lower hole in the drawbar bracket. Replace bolts "B" and tighten securely.

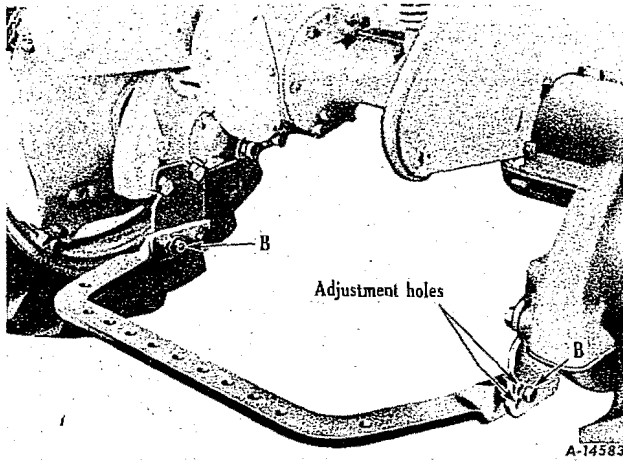

Illust. 50
Drawbar adjustment.


Seat

The tractor seat can be set in either of two positions by removing the tool box and changing the position of the two cap screws in the seat post base (*Illust. 50A*), giving a total adjustment of 1½ inches. Tighten the cap screws securely when reassembling and replace the tool box.

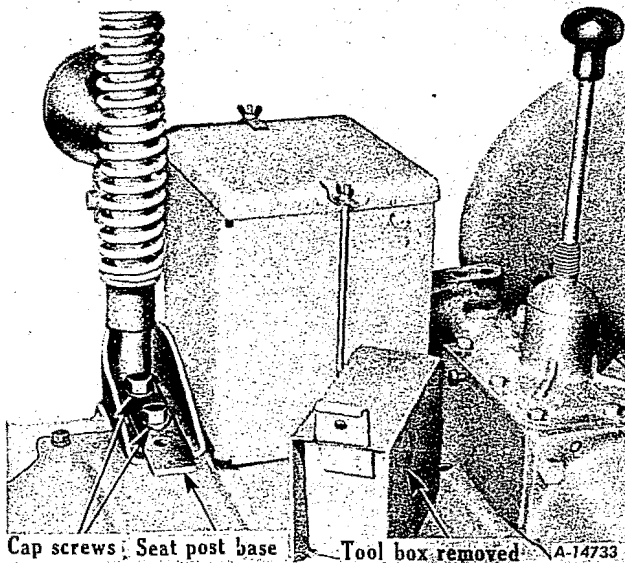

Illust. 50A
Seat set in forward position.

Wheels

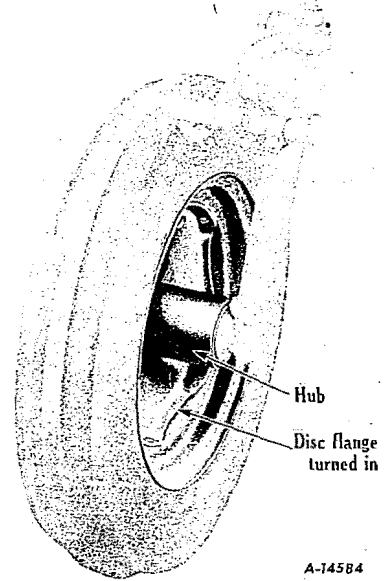


Illust. 50B
Front wheel with disc flange turned in.

Front Wheels

The front wheels are steel disc wheels with attached rims for 3.00-12 or 4.00-12 (2-ply and 4-ply) and 4.00-15 (4-ply) tractor-type tires.

Each wheel is mounted on the hub with five special bolts and may be mounted with the disc flange turned in or out to obtain different treads as described on page 51.

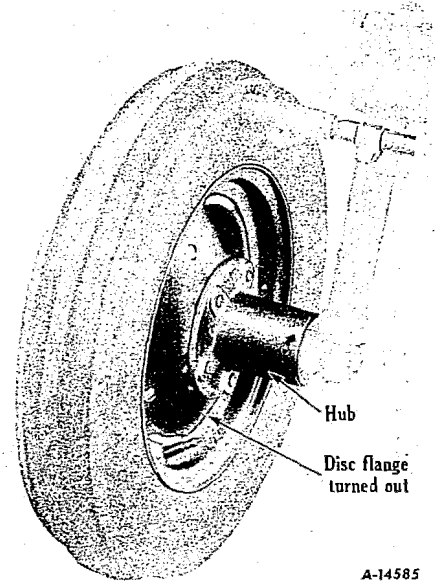

Illust. 50C
Front wheel with disc flange turned out.