

# INTRODUCTION


Assembled in this book are operating and maintenance instructions for the Farmall Cub. This material has been prepared in detail in the hope that it will prove helpful to you in providing a better understanding of the correct care and efficient operation of your tractor.

If you should need information not given in this manual, or require the services of a trained mechanic, get in touch with the International Harvester dealer in your locality. Dealers are kept informed on the latest methods of servicing tractors. They carry stocks of IH parts, and are backed in every case by the full facilities of a nearby International Harvester District Office.

The illustrations in this manual are numbered to correspond with the pages on which they appear; for example, *Illusts. 7 and 7A are on page 7.*

Throughout this manual the use of the terms LEFT, RIGHT, FRONT and REAR must be understood to avoid confusion when following instructions. LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the driver's seat. Reference to FRONT indicates the radiator end of the tractor, and REAR the drawbar.

When in need of parts, always specify the tractor and engine serial numbers. The tractor serial number is stamped on a name-plate attached to the steering gear housing on the right side of the tractor.


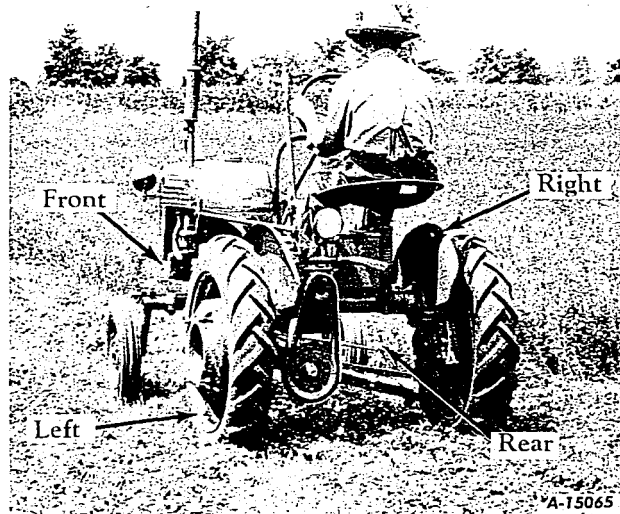


The serial number is preceded by the letters FCUB. *See Illust. 2.* The engine serial number is stamped on the left side of the engine crankcase to the right of the carburetor. This serial number is preceded by the letters FCUBM. *See Illust. 2A.*

For ready reference, we suggest that you write these serial numbers in the spaces provided below.

Tractor serial number  
FCUB 159676

Engine serial number  
FCUBM 162580

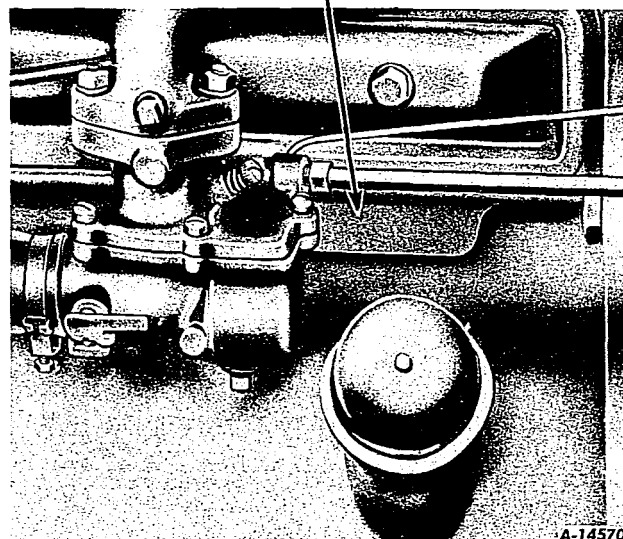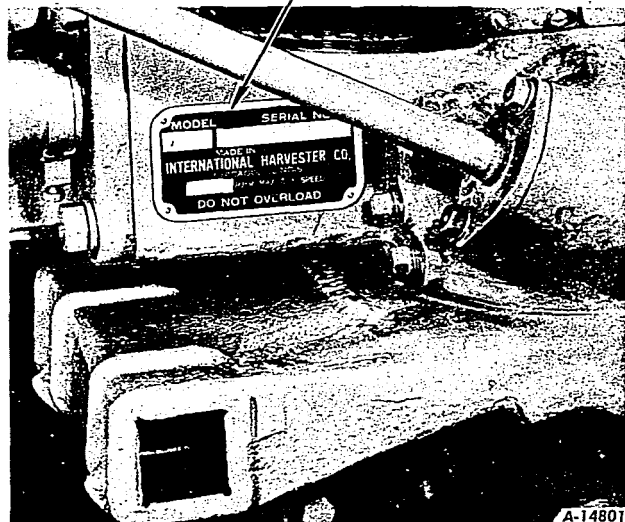

Illust. 2

Location of tractor serial number.

Illust. 2A

Location of engine serial number.