

## MAINTENANCE

Possible Cause

Possible Remedy

### Transmission, Belt Pulley and Power Take-Off

Hard to shift gears.....	Use correct grade of lubricant. <i>See page 17.</i>
Shifter fork or lever defective.....	Replace; or see your dealer.
Engine clutch drags.....	Refer under "Lack of Power."
Gears clashing.....	Stop tractor and disengage clutch before shifting gears.
Gears slipping out of mesh.....	See your dealer.
Noisy.....	Check oil level, use proper grade lubricant; or see your dealer.
Damaged parts.....	See your dealer.

### Rear Wheels

Do not turn.....	Release brake lock. Transmission, differential or clutch faulty. Refer to "Transmission, Belt Pulley and Power Take-Off"; or see your dealer.
------------------	---

### Front Wheels

Too tight or too loose.....	Check lubricant in bearings, check bearing adjustment; <i>see page 16.</i>
Lubricant leakage.....	Check oil seal; or see your dealer.

### Steering

Faulty.....	Check steering worm and gear, check front axle adjustment. <i>See page 53.</i> Check lubricant in front wheel. Check tire inflation; or see your dealer.
Defective front axle.....	Inspect linkage, check and replace faulty parts; or see your dealer.
Tractor turns to one side.....	Check and adjust brakes evenly. <i>See page 50.</i> Check pneumatic tire air pressures. Check front axle adjustment; <i>see page 53.</i>

### Pneumatic Tires

Excessive or uneven wear.....	Check for toe-in. <i>See page 53.</i> Check air pressure and check load on tires. <i>See page 54.</i>
Slippage, rear tire.....	Add more weight, and check for high pressure. <i>See page 54.</i> If tread is badly worn tires may slip more readily. Replace with new tires or use lug-type chains.

### Farmall Touch Control System

*See detailed instructions on pages 69 to 71; or see your dealer.*