

# SPECIAL EQUIPMENT

The Farmall Cub tractor is used for so many different types of work and is called on to operate under so many different conditions that a considerable variety of special equipment is necessary to adapt it to the varied requirements of the user.

The tractor, as regularly supplied, is equipped to perform straight drawbar work. Beyond that the special equipment requirements are so diverse that it is impractical to include any such equipment regularly on the tractor. In many cases you would be paying for equipment you do not need or want.

These special attachments can be installed on the tractor at any time, and once installed become a permanent part of your tractor.

Below is an index of the special equipment available. The instructions for operating and maintaining these attachments have been incorporated into the instructions for operating and maintaining the tractor. Supplemental information will be found in the following pages. You are urged to read and study this information in order to assure satisfactory service.

Special equipment must not be ordered from this manual. To order attachments, consult your International Harvester dealer, giving the tractor and engine serial numbers.

TYPES OF EQUIPMENT	ATTACHMENT NUMBER	PAGE NO.
Belt Pulley and Power Take-Off.....	351 233 R91	62, 63
Belt Pulley (tractors equipped with power take-off attachment).....	351 441 R91	62
Combination Rear Light and Tail Light.....	355 914 R91	66
De Luxe Upholstered Seat .....	357 544 R91	67
Detachable Seat Pad.....	351 440 R92	67
Electric Starting and Lighting.....	351 301 R93	66
Engine Hour Meter (tractors equipped with starting and lighting).....	356 735 R91	66
Exhaust Muffler.....	351 435 R92	65
Front Axle, Adjustable.....	351 389 R91	65
Front Wheel Weight, First.....	351 368 R91	63
Front Wheel Weight, Second.....	351 369 R91	63
High Clearance Attachment (tractors equipped with adjustable front axle).....	355 062 R91	66
Power Take-Off.....	351 234 R91	62
Rear Wheel Weight, First.....	351 372 R91	63, 64
Rear Wheel Weight, Second.....	351 373 R91	63, 64
Spark Arrester.....	351 642 R92	65
Swinging Drawbar.....	351 429 R91	65
Tire Pump (Enginair) for Pneumatic Tires.....	39 604 DA	64
Tire Pump (Schrader) for Pneumatic Tires.....	39 622 D	64
Tire Pump Kit (Schrader) for Pneumatic Tires.....	350 342 R91	64
Touch-Control System.....	354 396 R93	68, 69
Upholstered Seat.....	351 960 R93	67