

SPECIAL EQUIPMENT

Before attaching the second rear wheel weights, it is necessary to remove two bolts from each first weight and replace them with the longer bolts provided with the second weights.

If the second weights are removed, replace the two shorter bolts in each first weight.



Illust. 64

First and second rear wheel weights mounted on wheel.

Pneumatic Tire Pumps

Enginair or Schrader

These tire pumps are useful where air service is not easily obtained. They may be used for inflating tractor, truck, or automobile tires.

Note: These tire pumps may be used with any carbureted type engine, but they cannot be used on diesel engines. The tire pumps also are available for various spark plug thread sizes. Specify the size of spark plug thread when ordering.


If these pumps are to be used for inflating tires on a diesel-powered tractor, a carbureted engine of another unit must be used as the source of power.

To Use—Remove one of the spark plugs from the tractor engine, or any carbureted engine having the correct spark plug thread size, and replace with pumping element "A" (see *Illust. 64A*). Attach one end of pump hose "B" to the pumping element and the other end "C" to the valve stem of the tire to be inflated. Start the engine and run it at slow speed for maximum efficiency.

Schrader spark plug tire pump kit—This kit consists of items which are necessary for proper care of the tire valve and maintenance of proper air pressure. With this kit you can maintain tire pressure on all tractors, trucks and passenger cars by changing adapters on the tire pump to suit the spark plug thread size.

The following items are packed in a serviceable metal box:

- One tire pump with 16 feet of hose and an air gauge for registering pressure up to 100 pounds.
- Five adapters for spark plug thread sizes 10 mm., 14 mm., 18 mm., $\frac{1}{8}$ -18 and $\frac{1}{2}$ inch.
- Five valve cores and five valve caps which fit all standard tire valves (packed in small metal boxes).
- One valve repair tool and one valve fishing tool.
- One air-water tire valve and one air-water adapter.
- One tire pressure gauge for air-water tractor tires.

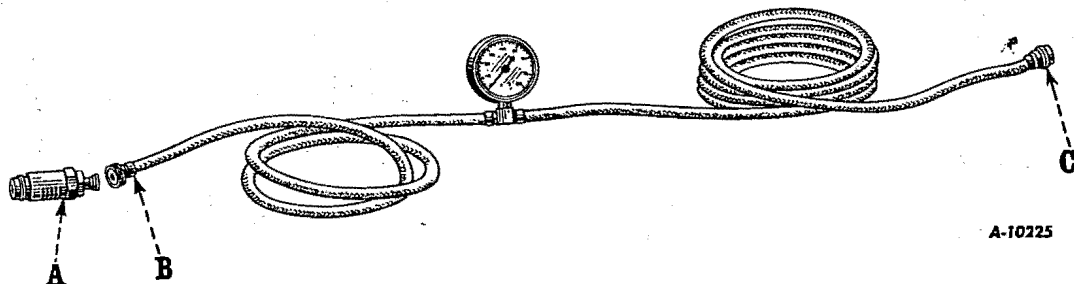

Illust. 64A

Enginair tire pump with 16-ft. hose and air gauge.