


## SPECIAL EQUIPMENT

### Exhaust Muffler

The exhaust muffler can be supplied for owners who desire quieter operation of their tractors. It reduces the sound of the exhaust to a quiet purr.

The muffler attaches easily to the exhaust pipe and may be attached to the spark arrester attachment in the same manner as it is attached to the exhaust pipe.

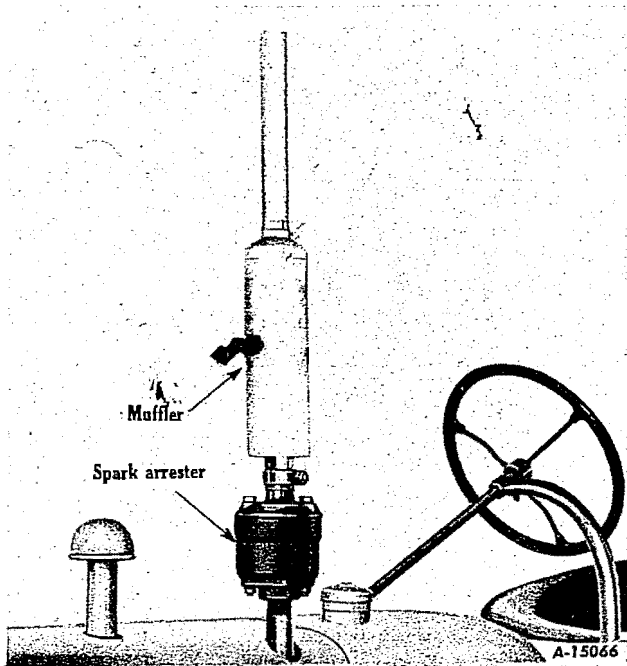

Illust. 65

Exhaust muffler and spark arrester assembled on tractor.

### Spark Arrester


The spark arrester smothers and extinguishes any sparks that may be thrown off in the exhaust. It reduces the fire hazard when operating the tractor near inflammable material. The arrester attaches readily to the exhaust pipe. The muffler is attached to the spark arrester in the same manner it is attached to the exhaust pipe.

### Cleaning

Remove the spark arrester once a month for cleaning. To clean, turn the spark arrester upside down and shake it until the loose particles are removed.

### Swinging Drawbar

The swinging drawbar is free to swing the full width of the regular drawbar, making it easier to turn the tractor under load when pulling trail-behind implements such as disk harrows. It also facilitates steering on the straightaway when the tractor is pulling a heavy load. The load exerts less sidewise pull on the tractor and therefore interferes less with the steering. This attachment is especially desirable when working in small, irregularly shaped fields.

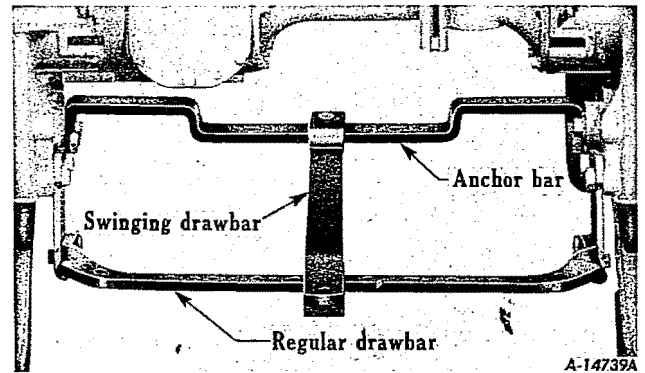


Illust. 65A

Swinging drawbar assembled on tractor.

### Adjustable Front Axle

The adjustable front axle attachment replaces the regular, fixed front axle. The variable treads of  $40\frac{5}{8}$ ,  $44\frac{5}{8}$ ,  $48\frac{5}{8}$ ,  $52\frac{5}{8}$  and  $56\frac{5}{8}$  inches permit adjustment to fit most any row crop ranging from narrow rows of vegetables to wide rows such as cotton and corn.

For instructions on adjusting the tread widths, see page 53.

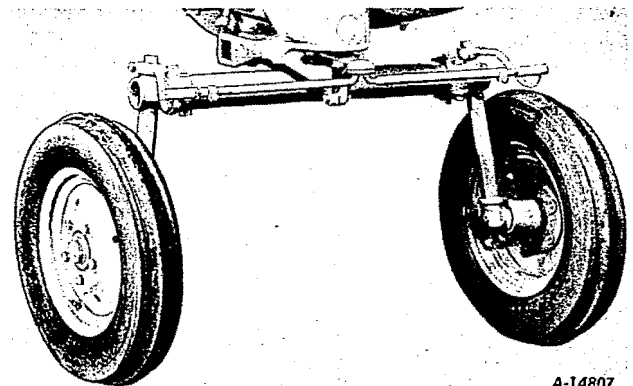

Illust. 65B

Adjustable front axle.