

INDEX

Description	Page No.	Description	Page No.
Periodic inspections	23	Stopping the engine	10
Pneumatic tire pumps	64	Stopping the tractor	10
Pneumatic tires	7, 53 to 55	Storage battery	43 to 46
Power take-off	6, 13, 62	Storing and housing your tractor	60
Preparing your tractor for each day's work	7	Swinging drawbar	65
Radiator filler cap	33, 34	Timing the distributor	35
Radiator, filling	34	Timing the magneto	32
Rear light and tail light	66	Tire chains	55
Rear wheels	51, 52	Tire pressure chart	54
Rust prevention	27	Tire pump, pneumatic	64
 		Tires, pneumatic	53 to 55
Seat	50	Touch-Control levers	68
Seat, de luxe, upholstered	67	Touch-Control system	67 to 69
Seat pad, detachable	67	Tractor serial number	2
Seat, upholstered	67	Trouble shooting chart	56 to 59
Sediment bowl (fuel strainer)	25	 	
Seed plate drive	55	Upholstered seat	67
Serial numbers, engine and chassis	2	Upholstered seat, de luxe	67
Shifter rod, power take-off	6	 	
Spark arrester	65	Valve clearance adjustment	46
Spark plugs and cables	29, 30	Valve stem mounting cones	55
Special equipment index	61	Views of the tractor	3
Specifications, lubricant	16, 17	 	
Specifications, tractor	70, 71	Wheels	50 to 52
Starter rod	6	Wheels, front tread	51, 53
Starting and lighting equipment (for tractors with battery ignition and voltage regulation)	40 to 45	Wheels, greasing, front	16
Starting and lighting equipment (for tractors with magneto ignition and voltage regulation)	36 to 39	Wheels, rear tread	51, 52
Starting the engine	13	Wheel weights	54, 63, 64
Starting the tractor	10	Wheel weights, liquid	54
		Wiring diagram	44, 45
		Wiring, distributor (battery ignition)	33
		Wiring, distributor (magneto)	30
		Wiring, spark plug	30