

Section 3

STEERING, FRONT WHEELS AND FRONT AXLE

CONTENTS

	Page
SPECIFICATIONS	3-2
FRONT WHEELS AND BEARINGS	
Removal	3-3
Inspection and Repair	3-4
Installation	3-4
REMOVAL AND DISASSEMBLY OF FRONT AXLE ASSEMBLY.....	3-5
INSPECTION AND REPAIR	3-6
REASSEMBLY AND INSTALLATION OF FRONT AXLE ASSEMBLY.....	3-7
STEERING ASSEMBLY	
Removal	3-9
Disassembly	3-11
Inspection and Repair	3-12
Reassembly	3-12
Installation	3-15
ADJUSTING THE TOE-IN	3-16