

FESM-3626

5. Remove the steering knuckle arm (1) from the steering knuckle (3), and remove the key (2) from the steering knuckle.

6. Remove the steering knuckle (3) from the front axle.


**NOTE:** When driving out the bushings, be sure to use a soft brass drift.

7. Remove the steering knuckle bushings from the axle if service is necessary.

8. Remove the axle pivot shaft bushings from the axle if they are to be replaced.

- |                         |
|-------------------------|
| 1. Steering knuckle arm |
| 2. Key                  |
| 3. Steering knuckle     |

## INSPECTION AND REPAIR

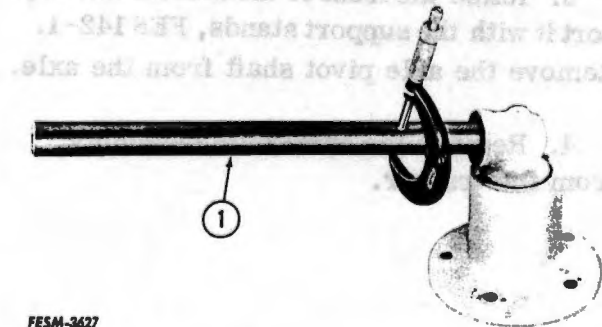

FESM-3627

- |                              |
|------------------------------|
| 1. Steering knuckle assembly |
|------------------------------|

1. Inspect the axle pivot shaft, thrust washers and bushings for wear or damage. Replace as necessary.

2. Inspect the steering knuckles (1) and bushings for wear or damage. (Refer to "Specifications.")

3. Inspect the steering knuckle arms, tie rods and axle for wear or damage. If any are bent out of alignment, straighten or replace as necessary.