



FESM-3625

1. Steering gear arm
2. Tie rod
3. Bolt (2)
4. Steering gear housing base
5. Axle pivot shaft
6. Tie rod
7. Front axle

5. Position the front axle (7) under the tractor and install the axle pivot shaft (5) and thrust washers. Install the nuts and bolts (3) securing the steering gear housing base (4) to the pivot shaft (5).

6. Connect the tie rods (2 and 6) to the steering gear arm (1).

7. Check and adjust the toe-in.  
(Refer to page 3-16.)