



FESM-3629

1. Inlet elbow
2. Inlet nipple
3. Cap screw and bolt
4. Steering gear housing assembly
5. Radiator grille
6. Radiator assembly
7. Fan housing
8. Support stands FES 142-1

5. If the steering gear housing requires service, remove it as follows:

(a) Remove the headlights and the hood and fuel tank assembly.

(b) Drain the coolant and remove the radiator water inlet and outlet elbows and hoses.

(c) Remove the water inlet nipple (2) from the R.H. side of the steering gear housing.

(d) Remove the screws securing the fan housing (7) to the radiator (6).

(e) Remove the cap screws and bolts (3) securing the housing (4) to the engine.

(f) Lower the steering gear housing so it clears the fan drive pulley, and remove the assembly from the tractor.

(g) Remove the radiator grille (5) and the radiator assembly (6) from the steering housing (4).