

## Inspection and Repair


1. Inspect all bushings and bearings for pitting, wear and roughness of operation. Replace as necessary.

2. Inspect the steering shaft and worm for wear or damage. Check the steering shaft thrust washers for wear.

3. Check the steering worm wheel shaft, gear, bushings and thrust washer for wear or damage. If there is any doubt of serviceability, replace the parts.

4. Be sure to use new gaskets and oil seals in reassembly.

## Reassembly

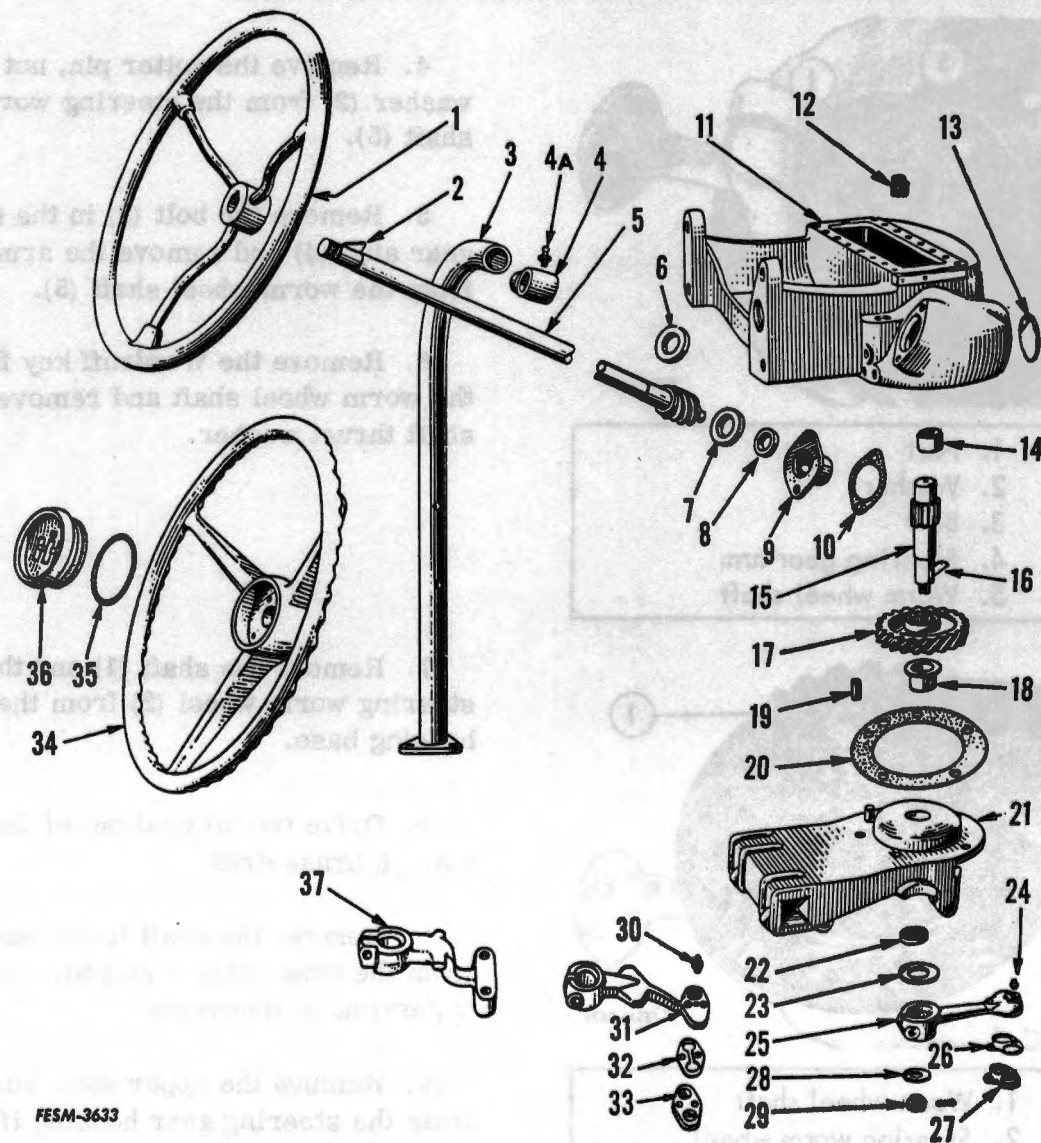

FESM-3633