


Installation

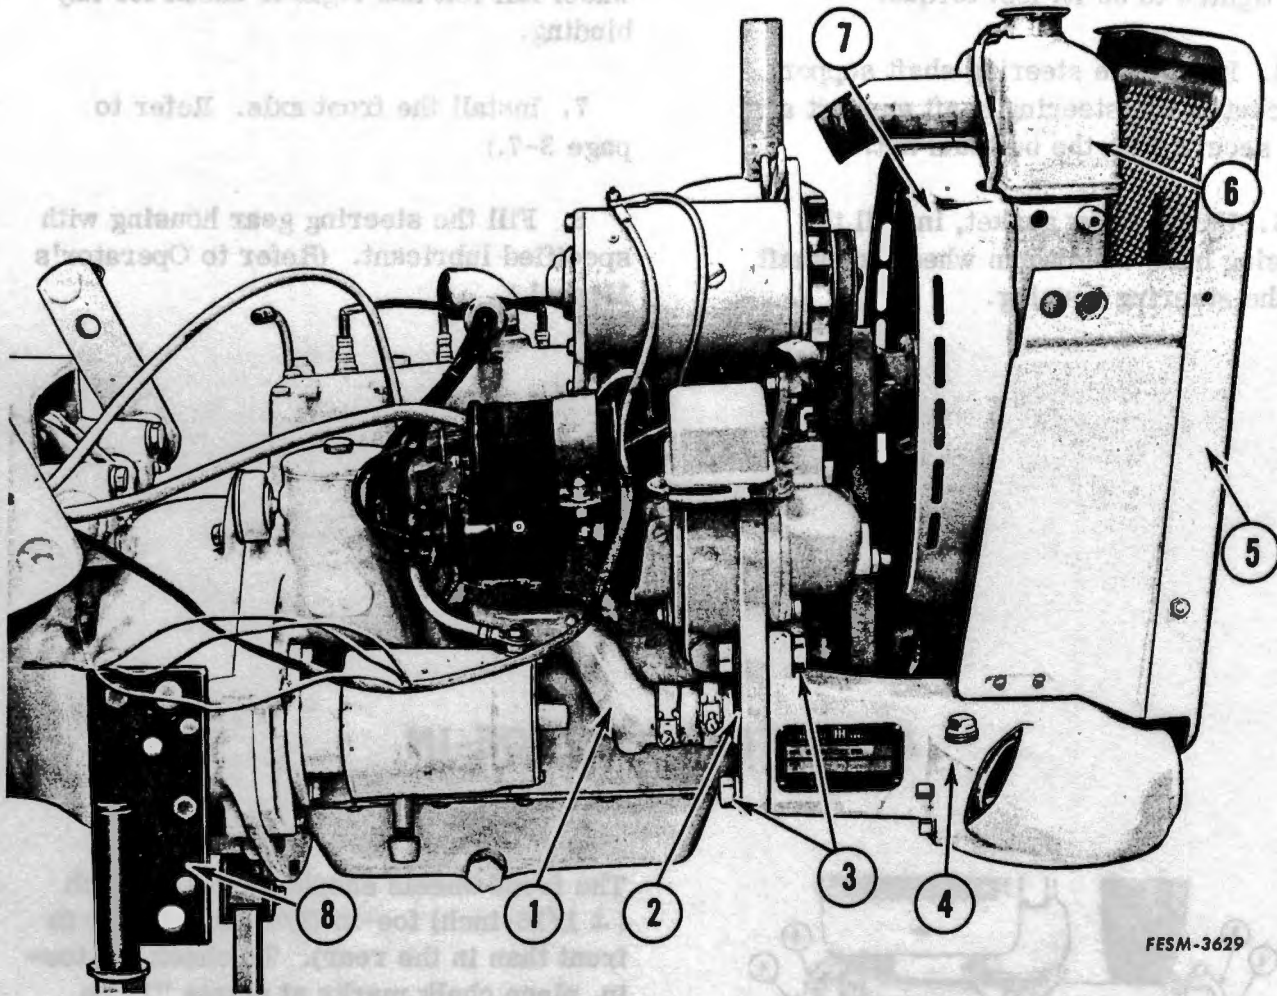

FESM-3629

1. Inlet elbow
2. Inlet nipple
3. Cap screw and bolt
4. Steering gear housing assembly
5. Radiator grille
6. Radiator assembly
7. Fan housing
8. Support stands, FES 142-1

1. If the steering gear housing was removed, install it on the tractor as follows:

(a) Using a new gasket, install the radiator (6) and the grille assembly (5) on the housing (4).

(b) Install the housing assembly on the front of the engine and secure with the cap screws and bolts (3).

(c) Install the screws securing the fan housing (7) to the radiator (6).

(d) Install the water inlet nipple (2), and then install and connect the inlet and outlet elbows and hoses.

(e) Install the hood and fuel tank and the headlights.

2. Using a new gasket, install the steering shaft with worm gear in the steering gear housing.