

# Section 4

## SPLITTING AND RECOUPLING THE TRACTOR

### CONTENTS

	Page
FRONT SECTION SPLIT .....	4-2
RECOUPLING .....	4-5
REAR SECTION SPLIT .....	4-7
RECOUPLING .....	4-9



1. Remove the headlights. Disconnect the fuel line from the fuel strainer, and remove the hood and fuel tank.

2. Block the front axle on both sides with wooden wedges (7). Support the rear of the tractor with support stands, FES 142-1 (8).

3. Remove the exhaust pipe (1).

4. Remove the choke control rod (9).

5. Disconnect and remove the battery. Its manifold tubes (6) are used to plug the openings in the pump and the hydraulic cylinder assembly to prevent dirt from entering the system.

1. Exhaust pipe
2. Governor control rod
3. Choke control rod
4. Clutch housing
5. Support stand FES 142-1
6. Manifold tubes
7. Wooden wedges (8)

**NOTE:** Disconnect the ground wire from the battery.