


6. Remove the nut and bolt securing the steering shaft bracket (2) to the steering shaft support arm (3). Remove the bracket from the support arm.

- 1. Steering shaft
- 2. Steering shaft support bracket
- 3. Steering shaft support arm

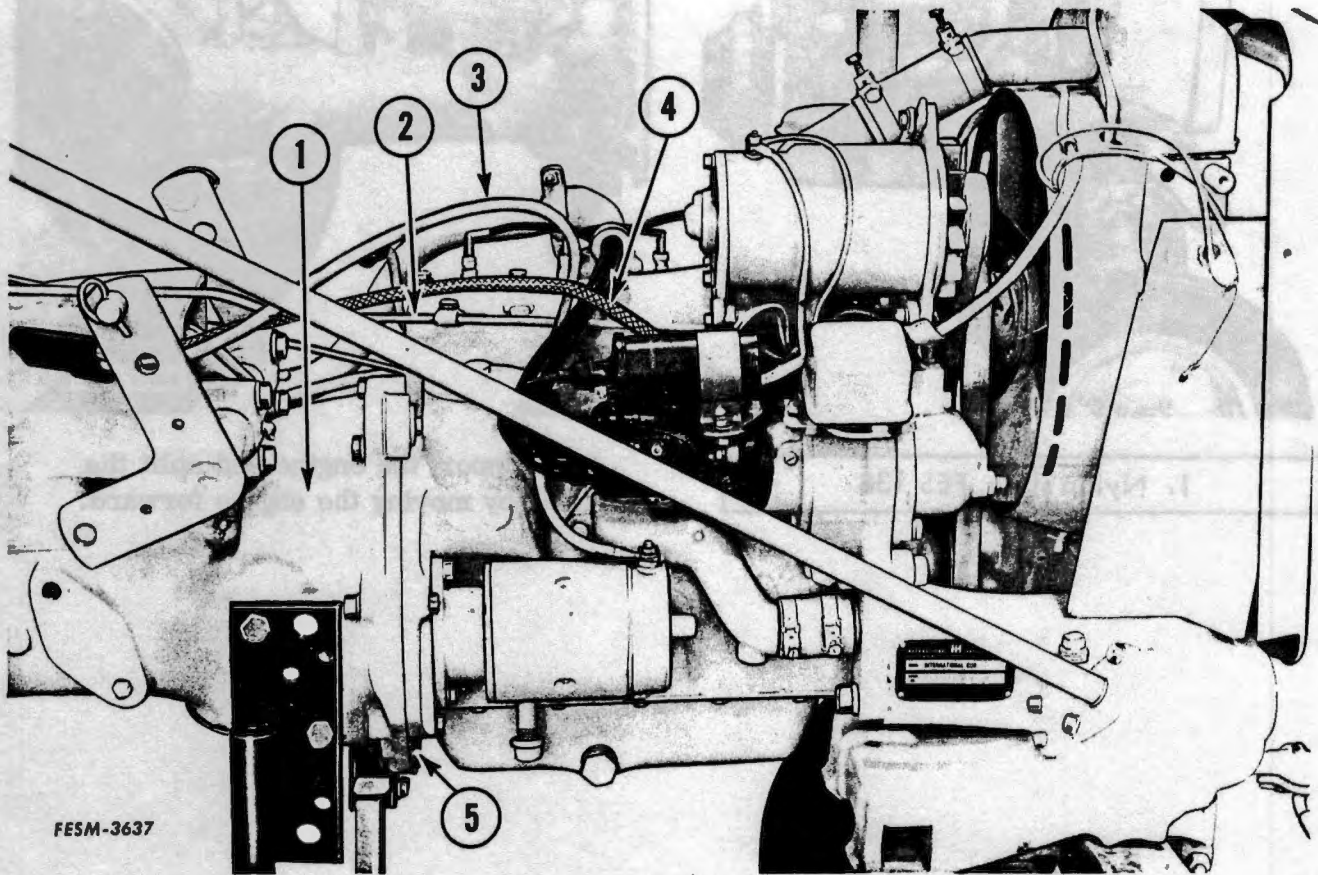

- 1. Clutch housing
- 2. Governor control rod
- 3. Starter motor cable
- 4. Wiring harness
- 5. Clutch housing cover

7. Disconnect the wires (3 and 4) to the coil, starter, regulator and lights. Be sure to identify the wires for proper reassembly.

8. Remove the governor control rod (2).

9. Remove the clutch housing cover (5). Remove the nuts and bolts securing the engine to the clutch housing (1).