


REAR SECTION SPLIT

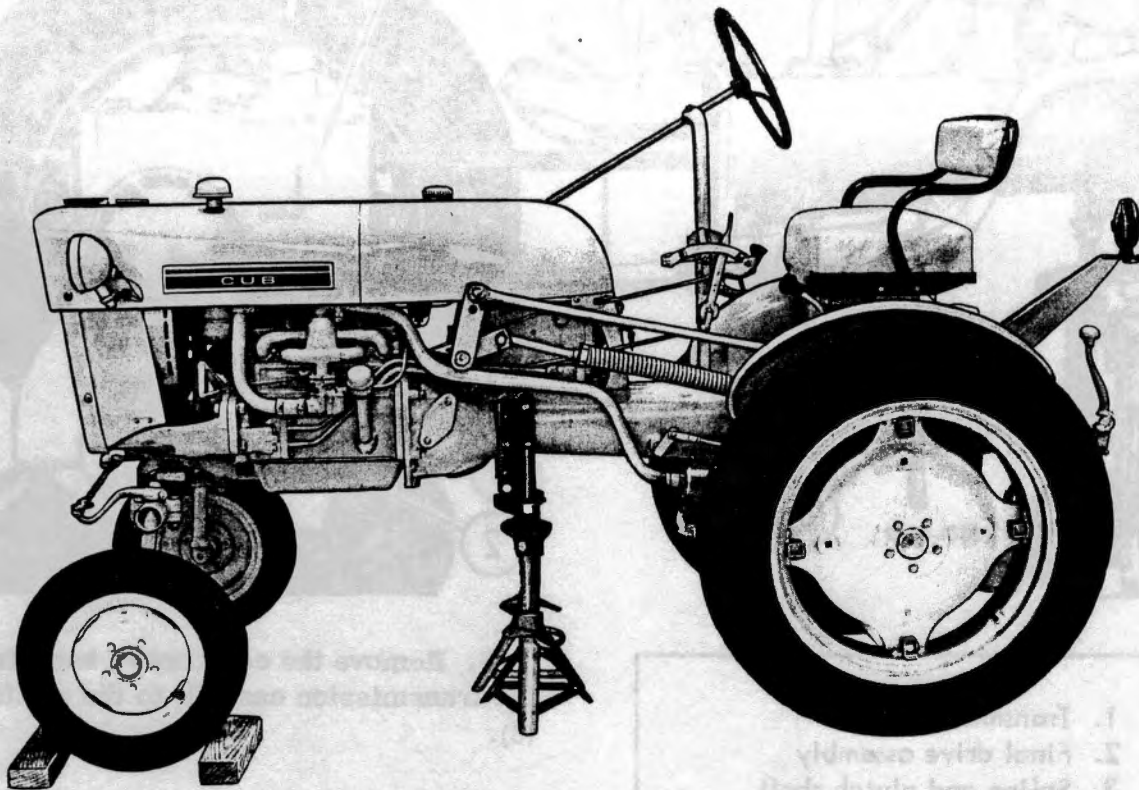


FESM-3640

1. Drive wooden wedges between the front axle and the tractor on both sides to stabilize the tractor. Block the front wheels of the tractor so it cannot move.

2. Support the tractor with stands, FES 142-1.

3. Remove the seat supports (1) and seat assembly (2) from the tractor.

4. Remove the battery and battery box (3) from the tractor.

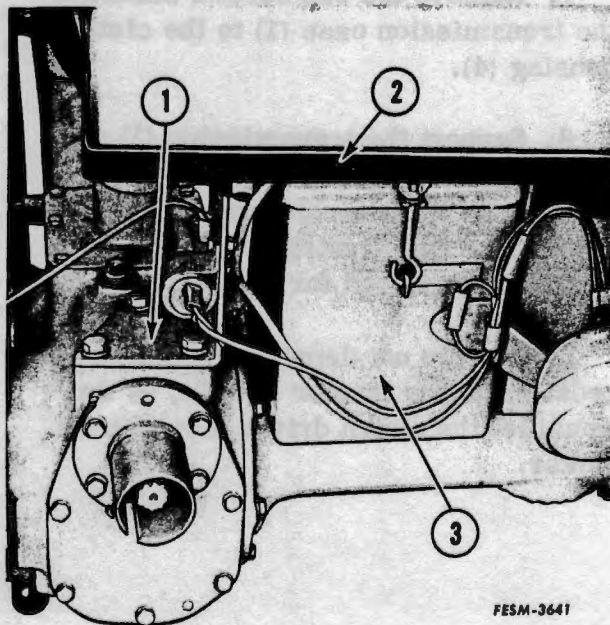

FESM-3641

- 1. Seat support
- 2. Seat assembly
- 3. Battery box