



1. Transmission case
2. Final drive assembly
3. Spline and clutch shaft
4. Clutch housing
5. Brake operating rod
6. Platform

5. Remove the cap screws securing the transmission case (1) to the platform (6).

6. Disconnect the brake operating rods (5).

7. Remove the cap screws securing the transmission case (1) to the clutch housing (4).

8. Support the transmission (1) and final drive (2), and split the tractor by moving the transmission and final drive rearward. See Illustration with fenders and wheel removed for ease of viewing).

NOTE: Do not depress the clutch pedal while the tractor is split, as this would let the clutch driven disc slip off center.