

RECOUPLING

1. Support the transmission (1) and final drive (2) and recouple the tractor. Be sure the transmission spline and clutch shaft (3) goes over the clutch linkage in the clutch housing (4), and the shaft splines mate with the clutch splines. (See illustration with fenders and wheel removed for ease of viewing.)

2. Install the cap screws securing the transmission case (1) to the clutch housing (4). Tighten to 80 ft. lbs. torque.

3. Connect the brake operating rods (5).

4. Install the cap screws securing the transmission case (1) to the platform (6).

5. Install the battery box and the battery.

6. Install the seat supports and seat assembly.

7. Remove the stands and wooden wedges.

8. Check and adjust the brakes and the engine clutch.