

RECOUPLING

4. Install the cap screws securing the transmission case (1) to the dist- form (2).
5. Install the battery box and the battery.
6. Install the seat supports and seat assembly.
7. Remove the stands and wooden wedges.
8. Check and adjust the brakes and the engine clutch.

1. Support the transmission (1) and final drive (2) and reattach the tractor. Be sure the transmission spline and clutch shaft (3) goes over the clutch housing in the clutch housing (4), and the shaft spline mate with the clutch spline. (See illustration with fenders and wheel removed for ease of viewing.)
2. Install the cap screws securing the transmission case (1) to the clutch housing (4). Tighten to 50 ft. lbs. torque.
3. Connect the brake operating rods (5).