

Section 5

ENGINE CLUTCH

CONTENTS

	Page
SPECIFICATIONS	5-2
REMOVAL	5-3
DISASSEMBLY	5-4
INSPECTION AND REPAIR	5-5
REASSEMBLY	5-7
INSTALLATION	5-8
CLUTCH ADJUSTMENT	5-9