


REMOVAL

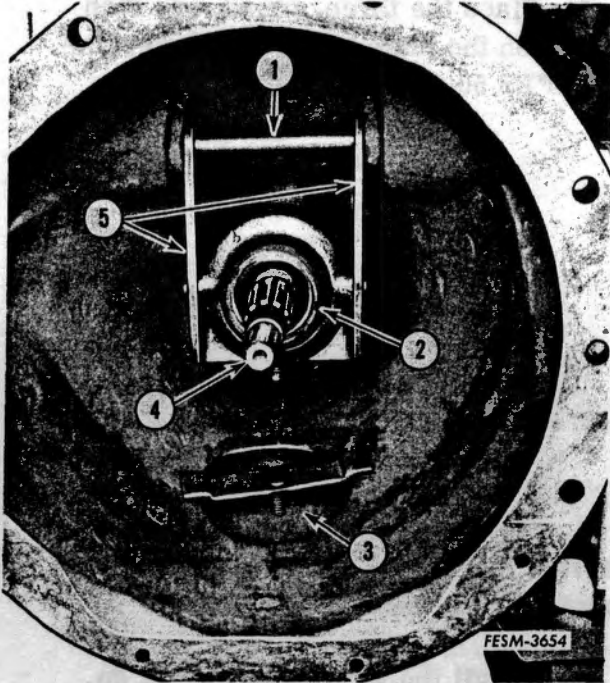


1. Split the tractor. (Refer to "Front Section Split", Section 4, page 4-2).

2. Remove the cotter pin and the clutch release yoke pivot pin (1) from the clutch housing. Remove the yoke (5) and the clutch release bearing (2) from the clutch housing.

NOTE: Before removing the clutch assembly, be sure to index the clutch to the flywheel for proper reassembly.

- 1. Release yoke pivot pin
- 2. Clutch release bearing and retainer
- 3. Hand hole cover
- 4. Transmission spline and clutch shaft
- 5. Side yokes

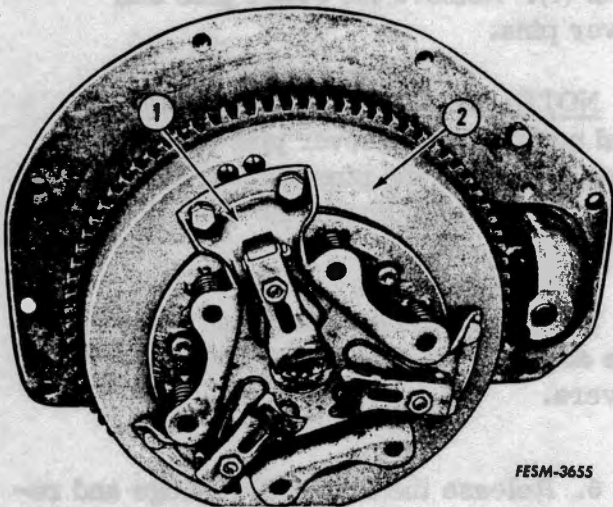

3. Remove the cap screws securing the back plate (1) to the flywheel (2), and remove the clutch assembly.

- 1. Back plate
- 2. Flywheel