

Section 6

Transmission - Continued

TRANSMISSION AND DIFFERENTIAL

CONTENTS

	Page
SPECIFICATIONS	6-1
GENERAL	6-4
REMOVAL	6-4
DISASSEMBLY	
Differential	6-5
Transmission	6-6
INSPECTION AND REPAIR	6-7
REASSEMBLY AND INSTALLATION	6-8

SPECIFICATIONS

Transmission

Type	Selective, sliding spur gears
Gears forward	3
Gears reverse	1

Countershaft gears (no. teeth)

Bevel pinion	10
Reverse speed gear	35
1st speed gear	39
2nd speed gear	36
3rd speed gear	26