

# Section 6A

## POWER TAKE-OFF AND BELT PULLEY

### CONTENTS

	Page
SPECIFICATIONS .....	6A-1
<b>BELT PULLEY</b>	
Removal and Disassembly .....	6A-3
Inspection and Repair .....	6A-4
Reassembly and Installation .....	6A-5

### POWER TAKE-OFF

Removal .....	6A-6
Disassembly .....	6A-7
Inspection and Repair .....	6A-8
Reassembly .....	6A-8
Installation .....	6A-9

### SPECIFICATIONS

#### Belt Pulley

Drive .....

Bevel gear backlash - inch ..... .003 to .005

#### Pulley drive shaft (with pinion) diameters

Inner bearing location - inches ..... 1.1076 to 1.1080

Outer bearing location - inch ..... .9842 to .9846

Bearings ..... Ball