



POWER TAKE-OFF

Removal

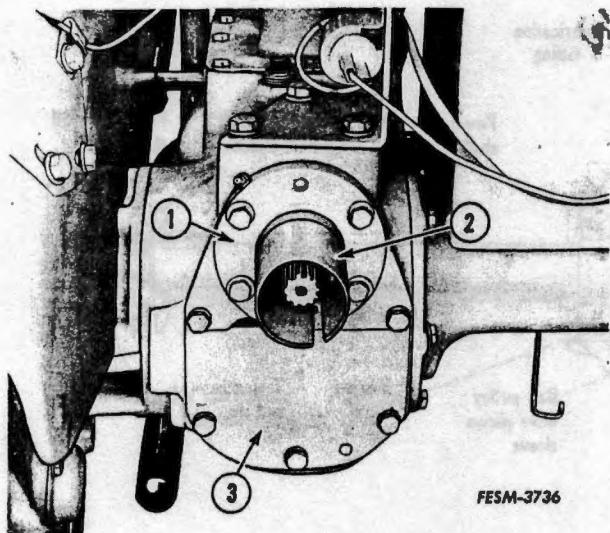

1. Remove the belt pulley assembly if equipped.
2. Remove the PTO shaft guard (2).
3. Remove the cap screws from the PTO shaft oil seal and bearing retainer assembly (1).
4. Remove the PTO assembly from the transmission case.

1. PTO shaft oil seal and bearing retainer
2. Shaft guard
3. PTO adapter plate

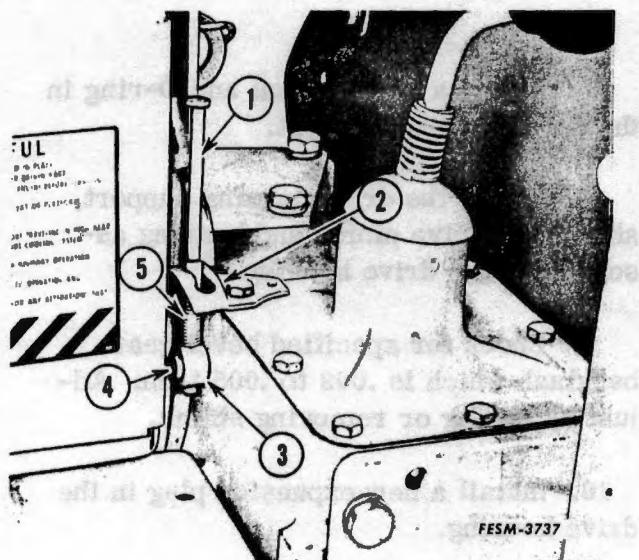

5. Remove the PTO shifter rod (1) and collar (3) from the shifter lever and shaft (4). Remove the lever and shaft and its seal from the transmission case.

1. PTO shifter rod
2. Shifter rod guide
3. Shifter lever collar
4. Shifter lever and shaft
5. Shifter rod spring