



7. Remove the cap screws securing the rear axle housings (2) to the transmission case (L.H. housing) or the differential shaft housing (R.H. housing). Support the final drive assemblies and remove them from the tractor.

8. Remove the drain plugs from the housings and drain the lubricant.

- |   |
|---|
| <ul style="list-style-type: none"> <li>1. Transmission case</li> <li>2. Rear axle housing</li> <li>3. Nylon sling, FES 138</li> </ul> |
|---|

## Disassembly

### DIFFERENTIAL SHAFTS

1. Loosen the lock nut and set screw securing the brake drum to the differential shaft. Remove the brake assembly from the shaft.

2. Remove the bearing retainer cap.

3. Remove the differential shaft from the rear axle housing.

4. Remove the retaining ring and remove the ball bearing from the shaft if service is necessary.

5. Remove the oil seal from the housing.