


Installation

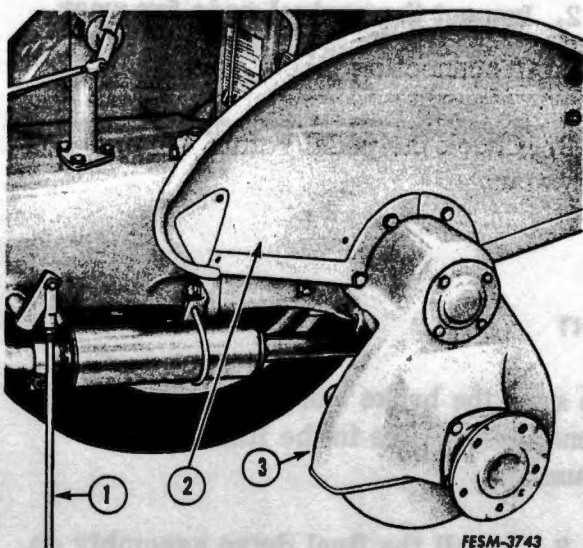

1. Brake operating rod
2. Fender
3. Final drive assembly

1. Install the final drive assemblies on the tractor.

2. Install the fenders (2), and then install the cap screws securing the rear axle housings to the transmission case (L.H. housing) or the differential shaft housing (R.H. housing). Tighten the cap screws to 35 ft. lbs. torque.

3. Connect the brake operating rods (1).


4. Install the rear wheels and tighten the lug bolts securely.

5. Install the drawbar.

6. Fill the housings to the correct level with Hy-Tran fluid.

BRAKES

Removal

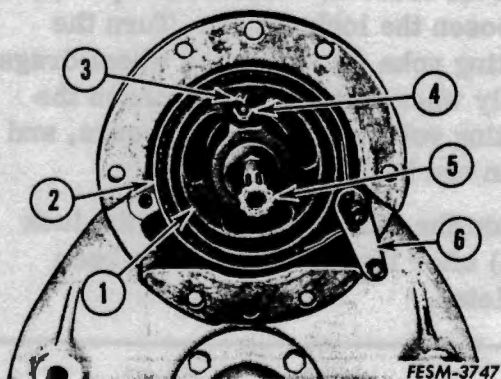

- | | |
|---------------|-----------------------|
| 1. Brake drum | 4. Lock nut |
| 2. Brake band | 5. Differential shaft |
| 3. Set screw | 6. Actuating toggle |

1. Remove the final drive assemblies. Refer to page 7-4.

2. Remove the brake bands (2) from the brake drums (1).

3. Loosen the lock nut (4) and set screw (3) and remove the brake drum (1) from the differential shaft (5).