


REMOVAL

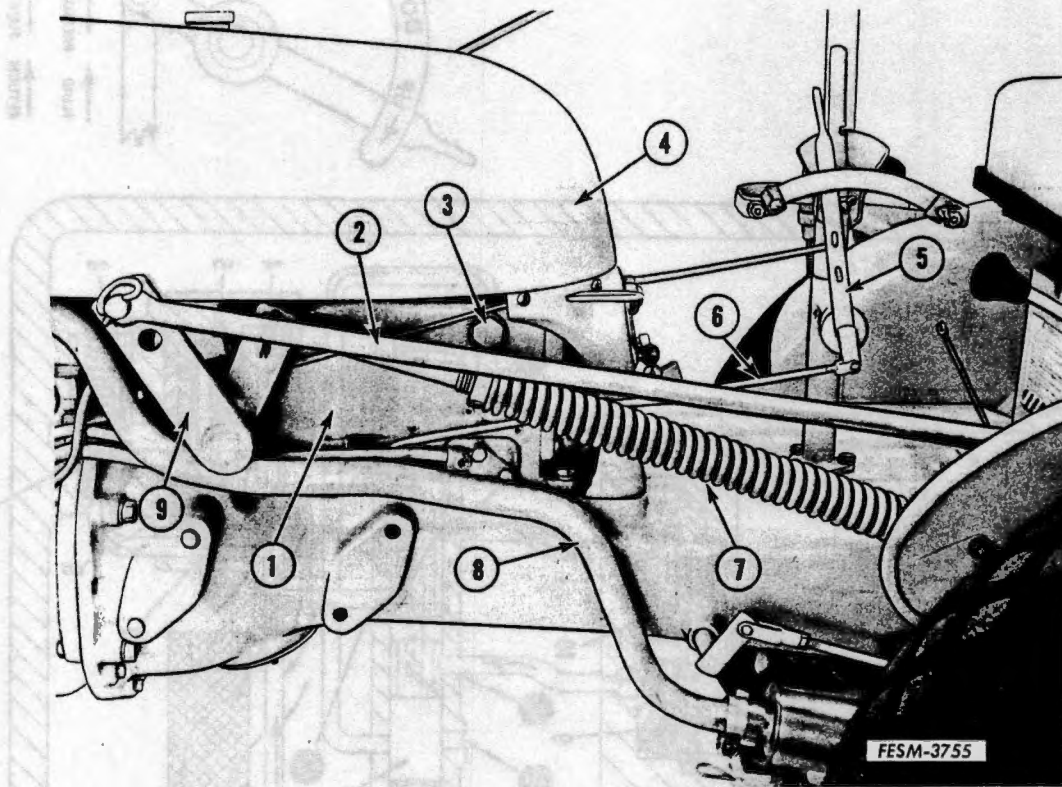

1. Cylinder block assembly
2. Lift link
3. Filler plug
4. Hood and fuel tank
5. Hand control lever
6. Control rod
7. Helper spring and rod
8. Exhaust pipe
9. Rockshaft

1. Disconnect the wires to the headlights and remove the headlights.

2. Disconnect the fuel line from the fuel strainer, and remove the hood and fuel tank (4).

3. Remove the exhaust pipe (8).

4. Remove the lift link (2) and the helper spring rod and spring (7) from the rockshaft (9).

5. Disconnect the control rod (6) from the hand control lever (5).

6. Clean the area around the Touch-Control pump and the cylinder block assembly (1).