


- 7. Remove the filler plug and the drain plug (3), and drain the Hy-Tran fluid from the cylinder block (1).
- 8. Disconnect and remove the manifold tubes from the Touch-Control pump and the cylinder block.
 - 1. Cylinder block
 - 2. Cap screws (4)
 - 3. Drain plug

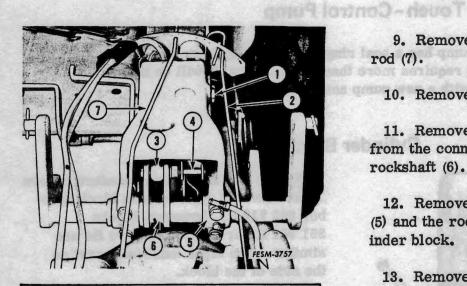

- 1. Filler plug
- 2. Choke control rod
- 3. Connecting rod
- 4. Connecting rod pin
- 5. Rockshaft bearing
- 6. Rockshaft
- 7. Governor control rod

5. Clearating lever stop 6. Control valve /

- 9. Remove the governor control rod (7).
 - 10. Remove the choke control rod (2).
- 11. Remove the connecting rod pin (4) from the connecting rod (3) and the rockshaft (6).
- 12. Remove the rockshaft bearings (5) and the rockshaft (6) from the cylinder block.
- 13. Remove the cap screws, and lift the cylinder block assembly off the tractor.

I. Centrol valve operating lever

2. Set screw.

3. Adjustable volce