

14. Remove the Touch-Control pump (1) from the engine.


1. Touch-control pump
2. Manifold tubes

DISASSEMBLY

Touch - Control Pump

The Touch-Control pump has a seal ring and gasket package available for service. If the pump requires more than this package, it will be necessary to replace the pump with a new pump assembly.

Cylinder Block

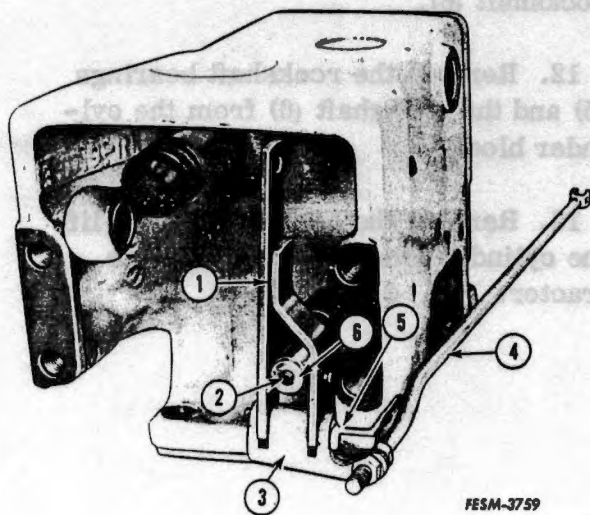

NOTE: Disassembly procedure covers Touch-Control systems with block number 360 719 R1, however, blocks 351 981 R1 or 354 383 R1 thru R4 are similar. The block number is cast on the side of the block.

1. Remove the control rod (4), operating lever stop (5) and the adjusting yoke (3).

2. Loosen the set screw (2) in the control valve (6) and remove the pin and the control valve operating lever (1).

1. Control valve operating lever
2. Set screw
3. Adjustable yoke

4. Control rod
5. Operating lever stop
6. Control valve