


- 1. Connecting rod
- 2. Piston
- 3. Connecting rod yoke

9. Push the piston (2) and the connecting rod assembly (1) out the head end of the block.

10. Remove the piston sleeve seal rings from the block.

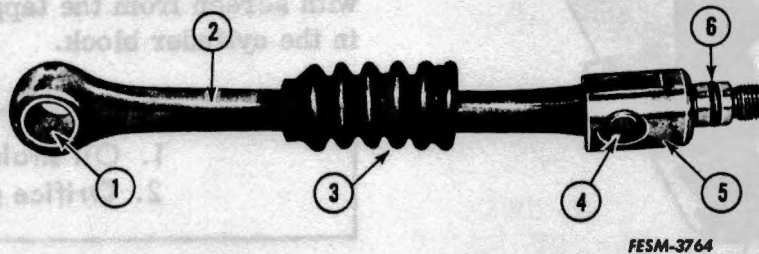

- 1. Connecting rod bushing
- 2. Connecting rod
- 3. Piston sleeve boot
- 4. Yoke pin
- 5. Connecting rod yoke
- 6. Seal ring

11. Remove the yoke nut and remove the piston from the yoke.

12. Press the connecting rod yoke pin (4) out of the yoke (5) and connecting rod (2) if necessary.

13. Remove the piston sleeve boot (3) from the connecting rod (2).

14. Press the bushing (1) out of the connecting rod (2) if service is necessary.