

17. Install the lever pin in the control valve operating lever (1) and the control valve (6). Tighten the set screw (2) in the control valve.


18. Install the control rod (4) and the adjustable yoke (3).

19. Install the operating lever stop (5) and lock. Do not tighten the cap screws at this time.

20. Install the control valve operating link on the operating lever.

- |                                  |                         |
|----------------------------------|-------------------------|
| 1. Control valve operating lever | 4. Control rod          |
| 2. Set screw                     | 5. Operating lever stop |
| 3. Adjustable yoke               | 6. Control valve        |

## INSTALLATION

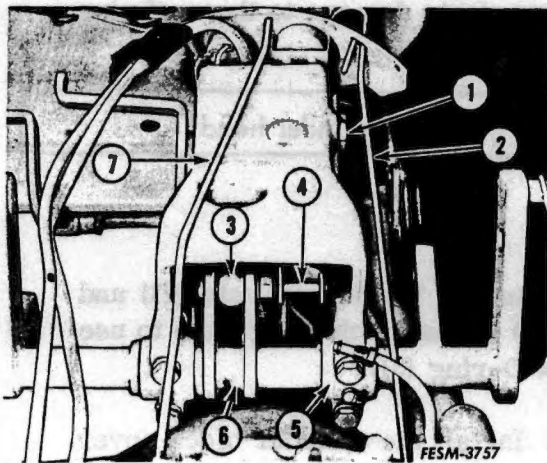

1. Install the pump on the engine using a new gasket. Tighten the cap screws to 20 ft. lbs. torque.

2. Install the cylinder block on the tractor and tighten the cap screws to 80 ft. lbs. torque.

3. Install the rockshaft (6) and rockshaft bearings (5). Tighten the cap screws to 80 ft. lbs. torque.

4. Install the connecting rod pin (4) in the connecting rod (3), rockshaft (6) and control valve link.

5. Install the choke control rod (2).

6. Install the governor control rod (7).

- |                             |
|-----------------------------|
| 1. Filler plug              |
| 2. Choke control rod        |
| 3. Connecting rod           |
| 4. Connecting rod pin       |
| 5. Rockshaft bearing        |
| 6. Rockshaft                |
| 7. Throttle to governor rod |