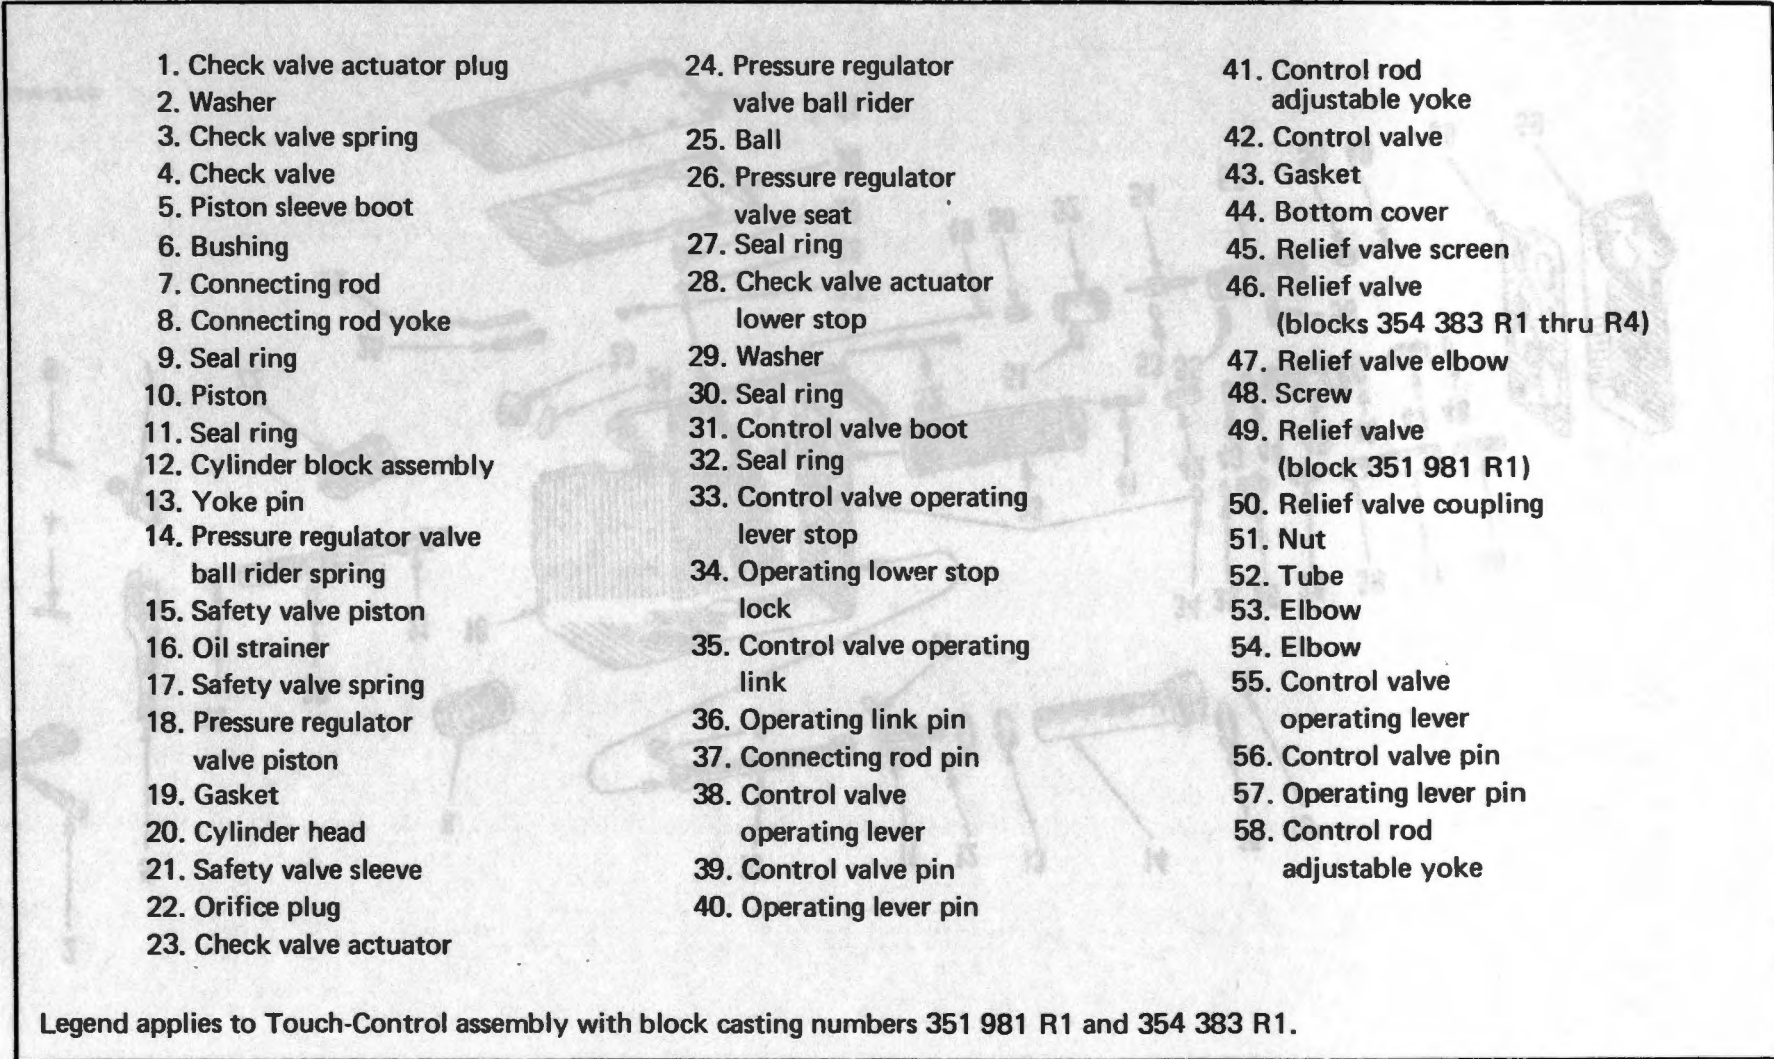


- 
- | | | |
|---|--|---|
| 1. Check valve actuator plug | 24. Pressure regulator valve ball rider | 41. Control rod adjustable yoke |
| 2. Washer | 25. Ball | 42. Control valve |
| 3. Check valve spring | 26. Pressure regulator valve seat | 43. Gasket |
| 4. Check valve | 27. Seal ring | 44. Bottom cover |
| 5. Piston sleeve boot | 28. Check valve actuator lower stop | 45. Relief valve screen |
| 6. Bushing | 29. Washer | 46. Relief valve (blocks 354 383 R1 thru R4) |
| 7. Connecting rod | 30. Seal ring | 47. Relief valve elbow |
| 8. Connecting rod yoke | 31. Control valve boot | 48. Screw |
| 9. Seal ring | 32. Seal ring | 49. Relief valve (block 351 981 R1) |
| 10. Piston | 33. Control valve operating lever stop | 50. Relief valve coupling |
| 11. Seal ring | 34. Operating lower stop lock | 51. Nut |
| 12. Cylinder block assembly | 35. Control valve operating link | 52. Tube |
| 13. Yoke pin | 36. Operating link pin | 53. Elbow |
| 14. Pressure regulator valve ball rider spring | 37. Connecting rod pin | 54. Elbow |
| 15. Safety valve piston | 38. Control valve operating lever | 55. Control valve operating lever |
| 16. Oil strainer | 39. Control valve pin | 56. Control valve pin |
| 17. Safety valve spring | 40. Operating lever pin | 57. Operating lever pin |
| 18. Pressure regulator valve piston | | 58. Control rod adjustable yoke |
| 19. Gasket | | |
| 20. Cylinder head | | |
| 21. Safety valve sleeve | | |
| 22. Orifice plug | | |
| 23. Check valve actuator | | |

Legend applies to Touch-Control assembly with block casting numbers 351 981 R1 and 354 383 R1.