

Section 1

ENGINE

CONTENTS

	Page
SPECIFICATIONS	1-4
ENGINE REMOVAL	1-10
ENGINE INSTALLATION	1-12
CYLINDER HEAD	1-13
VALVES	
Valve Lash Adjusting Procedure	1-15
Removing Valves	1-16
Inspection	1-17
General	1-17
Valves	1-18
Valve Seat Retainer Keys	1-19
Valve Guides	1-20
Valve Seats	1-20
Rotocap	1-20
Testing Rotators	1-20
Reconditioning	1-21
Valve Guides	1-21
Valves	1-21
Valve Seats	1-23
Refacing Seats	1-23
Reassembly	1-25
CONNECTING RODS, PISTONS AND PISTON RINGS	
General	1-25
Connecting Rods	1-25
Pistons	1-26
Piston Rings	1-26
Piston Pins	1-26