

Probable Cause	Remedy
Engine Will Not Turn Over	
1. Cranking motor inoperative or defective	Replace.
2. Battery faulty	Replace Battery.
3. Cables and terminals faulty	Inspect ground cable and battery-to-starting switch cable for any faults which may cause shorting; also inspect for incorrect connections. Replace cables if necessary.
4. Starting switch defective	Replace starting switch.
5. Internal seizure	Hand crank engine with spark plugs removed and clutch disengaged. If engine does not turn easily, internal damage is indicated.
Engine Turns But Will Not Start	
1. Fuel system faulty (a) No fuel in tank (b) Fuel strainer bowl screen clogged (c) Water in gasoline (d) No gasoline at carburetor	Fill tank with fuel. Clean bowl and screen. Drain gasoline tank, gasoline strainer and carburetor. Refill with clean gasoline. Clean fuel line from tank to carburetor. Clean fuel inlet screen in carburetor. Check for clogged vent holes in fuel tank cap.
2. Battery charge low and does not turn engine fast enough	Charge or replace battery.
3. Ignition system faulty. (a) Broken distributor rotor (b) Moisture in the distributor	Replace rotor. Remove cap and rotor and dry off. Use compressed air to remove moisture from distributor.