Probable Cause	Remedy
Excessive Fuel Consumption - Continued	
 4. Carburetor: (a) Float level set too high (b) Leaking needle or seat (c) Choke plate not fully open 	Check float level and reset if necessary. Repair or replace. Reposition choke control linkage.
5. Restriction in air cleaner	Service the air cleaner.
Engine	Noises - Park and the property result fill .
1. Loose piston pin. A sharp rap at idling speed. The pin at fault can be found by short circuiting the spark plugs, one at a time, until the noise stops	Repair or replace.
2. A flat slap, when advancing engine speed under load, indicates a loose piston	Replace piston.
3. A metallic knock when idling and retarding engine speed, but disappears under load indicates worn or loose	Camery deposits from interview facts or off
connecting rod bearings. The bearing at fault can be located by short circuiting the spark plugs one at a time. The noise will disappear when the cylinder with the defective bear-	Stem and girlde
ing is short circuited	Replace worn bearings.
Bearing	Failure
1. Low oil pressure	Refer to problem "Loss of Oil Pressure."
2. Lack of oil	Maintain proper oil level. Check for leaks.
3. Engine runs too hot	Keep engine at normal operating temperature.