

	Page
Removal	1-26
Disassembly	1-27
Inspection and Repair	1-28
Reassembly	1-30
Piston Fit in Bore	1-31
Bearing Fitting Procedure	1-32
Installation	1-35

CRANKCASE CYLINDER RE-BORING PROCEDURE

When to Re-Bore	1-36
Preparing the Block	1-36
Re-Boring	1-37
Honing	1-37
Cleaning	1-38
Checking Clearance	1-38

TIMING GEAR TRAIN AND FRONT COVER

General	1-38
-------------------	------

CAMSHAFT

General	1-43
-------------------	------

CRANKSHAFT AND MAIN BEARINGS

General	1-47
-------------------	------

LUBRICATING OIL PUMP

General Description	1-54
Oil Pump	1-54
Pressure Regulator Valve	1-55
Removal and Disassembly	1-55
Inspection and Servicing	1-56
Reassembly	1-57

COOLING SYSTEM

General Description and Operation	1-58
Removal of Radiator Assembly	1-59
Inspection and Repair	1-59
Installation of Radiator Assembly	1-60
Cooling Fan Service	1-60

TROUBLE SHOOTING	1-63
-----------------------------------	------

TUNE-UP	1-74
--------------------------	------