



## Float Assembly

Replace the float assembly if float is loaded with fuel or if the float lever axle bearing is worn excessively. Inspect top side of the float lever for wear where it

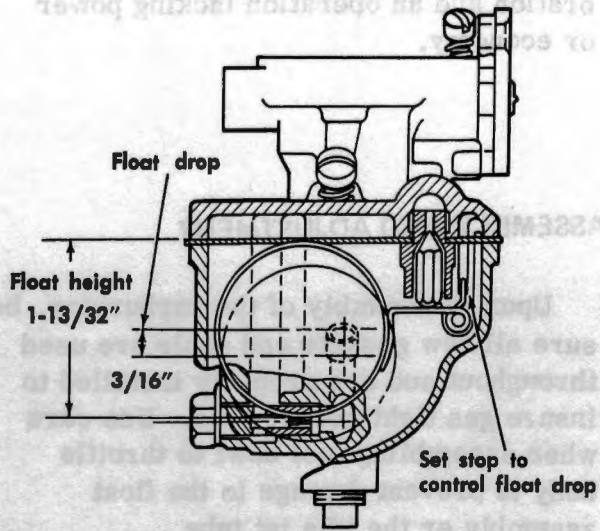


contacts the fuel needle valve.


The float axle should be replaced if any wear can be detected on its bearing surfaces.

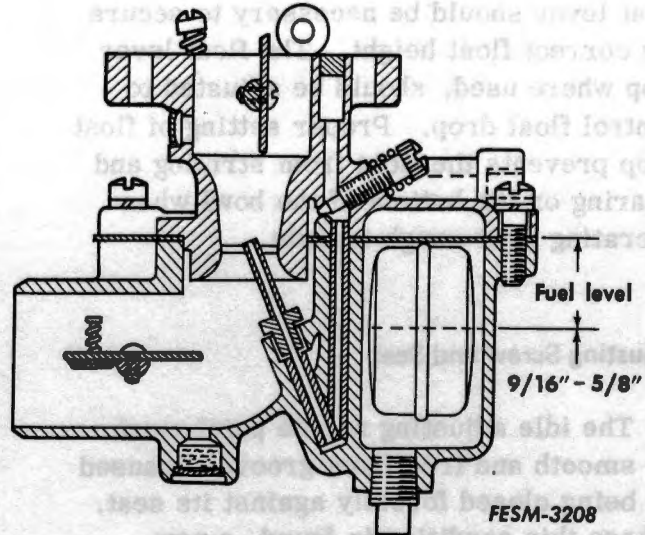

## IH CARBURETOR

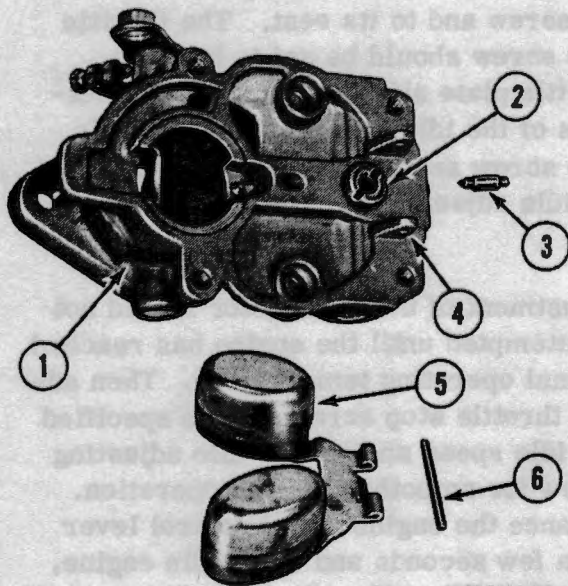

FESM-4276

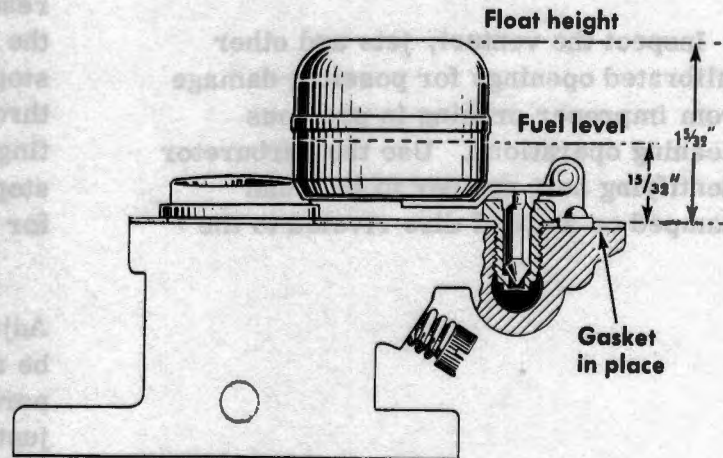

FESM-2617

- |                    |                       |
|--------------------|-----------------------|
| 1. Throttle body   | 4. Float axle support |
| 2. Fuel valve seat | 5. Float              |
| 3. Fuel valve      | 6. Float axle         |

## ZENITH CARBURETOR