



FESM-3211

- | | |
|---|---|
| 1. Governor connecting rod | 16. Governor shaft bushing |
| 2. Adjusting rod end clevis | 17. Bumper spring body |
| 3. Rod end pin | 18. Bumper spring |
| 4. Rockshaft and bracket extension assembly | 19. Governor base dowel pin |
| 5. Rockshaft extension bracket | 20. Governor housing assembly |
| 6. Woodruff key | 21. Governor housing gasket |
| 7. Governor spring | 22. Governor sleeve stop ring |
| 8. Governor and spring rockshaft assembly | 23. Governor thrust ball bearing |
| 9. Rockshaft oil seal | 24. Governor thrust bearing |
| 10. Rockshaft bearing | 25. Governor base bushing |
| 11. Spring throttle lever | 26. Governor weight |
| 12. Throttle lever shaft | 27. Governor weight pin |
| 13. Speed change lever stop | 28. Governor with carrier and pin shaft |
| 14. Screw | 29. Governor tension fork |
| 15. Expansion plug | 30. Rockshaft extension assembly |
| | 31. Rockshaft extension stop ring |