



# ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
<b>MAGNETO, International Type J-4</b>				
	251 492 R91	MAGNETO, ASSEMBLY		1
	179 843	SCREW, CAP, HEX-HD., 3/8-16NC x 1-1/2"		1
	114 494	NUT, JAM, HEX., 3/8-24NF		1
	103 321	WASHER, LOCK, 3/8"		2
1	351 693 R91	CAP, DISTRIBUTOR		1
2	38 609 DA	WASHER, DISTRIBUTOR GEAR COVER		2
3	251 534 R1	FELT, DISTRIBUTOR GEAR COVER		1
4	251 532 R1	GASKET, DISTRIBUTOR GEAR COVER		1
5	351 692 R91	ROTOR, DISTRIBUTOR		1
6	51 666 D	SPRING, DISTRIBUTOR CAP		2
7	51 667 D	PIN, DISTRIBUTOR CAP SPRING		2
8	353 451 R91	BODY, DISTRIBUTOR, ASSEMBLY (WILL WORK FOR 351 694 R91) (COMPOSED OF -		1
	1 BODY	§ 251 527 R21	1 RETAINER	49 424 D
	1 FELT	49 423 D	3 SCREW	435 429
	1 GASKET	251 530 R1	2 SPRING	51 666 D.
	2 PIN	51 667 D	3 WASHER	120 217)
	435 429	SCREW, MACHINE, SLOTTED-RO-HD., CD-PLTD., No. 10-32NF x 9/16"		3
	120 217	WASHER, LOCK, CD-PLTD., No. 10		3
9	251 530 R1	GASKET, DISTRIBUTOR BODY		1
10	354 136 R92	CONDENSER, 353 903 R92, w/CLAMP, 353 905 R1 (WILL WORK FOR 251 539 R91)	MAGNETO 501 TO 81410	1
	131 954	SCREW, MACHINE, SLOTTED-FIL-HD., CD-PLTD., No. 8-32NC x 1/4"		1
	121 841	WASHER, LOCK, No. 8		1
10	353 903 R92	CONDENSER	MAGNETO 81411 UP	1
11	251 508 R91	CORE, COIL		1
12	251 512 R1	CLIP, COIL CORE		2
13	251 513 R1	SCREW, HOLD-DOWN, COIL CORE		2
	121 841	WASHER, LOCK, CD-PLTD., No. 8		2
14	356 686 R91	CABLE, COIL TO DISTRIBUTOR (WILL WORK FOR 49 125 D)		1
15	251 553 R1	NIPPLE, COIL TO DISTRIBUTOR CAP		2
17	251 552 R1	WEDGE, COIL		2
18	38 609 DA	WASHER, COIL COVER SCREW		2
19	251 503 R1	WASHER, COIL COVER SEAL		2
20	251 502 R11	COVER, COIL		1
	132 760	SCREW, MACHINE, SLOTTED-RO-HD., CO-PLTD., No. 8-32NC x 1/2"		2
§ - NOT SERVICED SEPARATELY				

Always give MAGNETO NUMBER when ordering Parts.