



ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	SERIAL NUMBER	NO. REQ'D
MAGNETO, International Type J-4 — Continued				
34	24 603 D	WASHER, LOCK, MAGNETO MEMBER		1
35	251 591 R1	WASHER, LOCK, IMPULSE COUPLING, 1/2"		1
36	47 470 D	NUT, IMPULSE COUPLING		1
37	46 168 DB	GASKET, MAGNETO		1
38	251 531 R11	COVER, DISTRIBUTOR GEAR, w/GASKET, 251 532 R1 AND FELT, 251 534 R1		1
	132 760	SCREW, SLOTTED-RD-HD., CD-PLTD., No. 8-32NC x 1/2"		2
39	251 526 R1	PINION, ROTOR		1
40	49 424 D	RETAINER, FELT, DISTRIBUTOR BODY (WILL WORK FOR 251 529 R1)		1
41	49 423 D	FELT, DISTRIBUTOR BODY		1
42	353 172 R91	PACKAGE, BREAKER ARM AND STATIONARY POINT		1
	436 692	SCREW, MACHINE, SLOTTED-PAN-HD., CD-PLTD., No. 8-32NC x 5/16"		1
43	353 905 R1	CLAMP, CONDENSER	MAGNETO 81411 UP	1
	131 958	SCREW, MACHINE, SLOTTED-FIL-HD., CD-PLTD., No. 8-32NC x 5/16"		1
	121 841	WASHER, LOCK, No. 8		1
44	353 723 R91	SCREW, TERMINAL, 353 907 R1, w/INSULATOR, 353 906 R1 (WILL WORK FOR 251 571 R11)	MAGNETO 501 TO 139747	1
44	353 907 R1	SCREW, TERMINAL	MAGNETO 139748 UP	1
	120 622	NUT, HEX., CD-PLTD., No. 8-32NC		3
	121 841	WASHER, LOCK, CD-PLTD., No. 8		3
45	353 906 R1	INSULATOR, SPRING ANCHOR TERMINAL	MAGNETO 139748 UP	1
46	251 538 R1	WASHER, TERMINAL INSULATOR		1
47	21 394 D	WASHER, STATIONARY POINT SUPPORT AND TERMINAL		2
48	106 749	KEY, WOODRUFF No. 3, 1/8 x 1/2"		1
49	24 523 D	WASHER, MAGNETO BOLT (WILL WORK FOR 62 493 D)		1
50	24 610 D	WASHER, PAWL PIN		2
51	30 114 D	RING, SNAP, PAWL PIN		2
52	51 303 D	SPRING, PAWL		2
53	27 311 D	OILER, BEARING		1
54	251 557 R1	PAWL		2
55	251 561 R11	MEMBER, MAGNETO		1
	251 572 R1	CLIP, BREAKER SPRING	MAGNETO 501 TO 139747	1
	251 498 R1	CUP, BEARING SEAL		1
	21 372 D	GREASE, MAGNETO, TUBE OF (FURNISHED WHEN ORDERED)		X
	352 359 R1	SHIM, ROTOR SHAFT		4

X - AS REQUIRED

Always give MAGNETO NUMBER when ordering Parts.