



Reference numbers only are shown in illustration. Use I H part numbers in ordering.

### MAGNETO IGNITION SWITCH AND CABLE

1	8 732 D	KNOB, SWITCH	1
2	120 217	WASHER, LOCK, CD-PLTD., No. 10	1
3	56 517 D	NUT, MOUNTING, SWITCH	1
	138 553	WASHER, LOCK, INTERNAL TOOTH, CD-PLTD., 9/16"	1
4	56 519 D	SEAL, DUST, SWITCH PLUNGER	1
5	59 109 D	SPACER, MAGNETO IGNITION SWITCH	1
6		SWITCH, MAGNETO IGNITION (ORDER 54 207 DB)	1
7	352 107 R91	CLIP, MAGNETO GROUNDING SWITCH CABLE	2
	144 531	SCREW, SLOTTED, TRUSS-HD., CD-PLTD., 1/4-20NC x 1/2"	1
	103 319	WASHER, LOCK, 1/4"	1
8	58 189 D	CABLE, SWITCH	1
	132 100	SCREW, MACHINE, SLOTTED-FIL-HD., CD-PLTD., No. 10-32NF x 5/16"	1
	131 183	WASHER, LOCK, CD-PLTD., No. 10	1
9	54 207 DB	SWITCH, IGNITION, ASSEMBLY	1
	122 159	SCREW, MACHINE, SLOTTED-RO-HD., CD-PLTD., No. 10	1
	121 841	WASHER, LOCK, CD-PLTD., No. 8	1