



Right Side View—Generator, Regulator, Cranking Motor, Battery and Rear Light Connections


Rear Light and Battery Connections

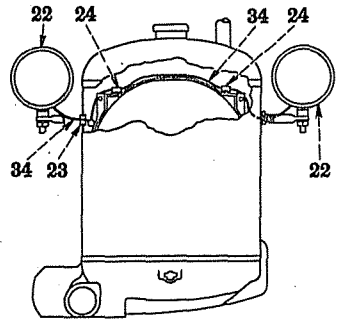


Headlight and Connections

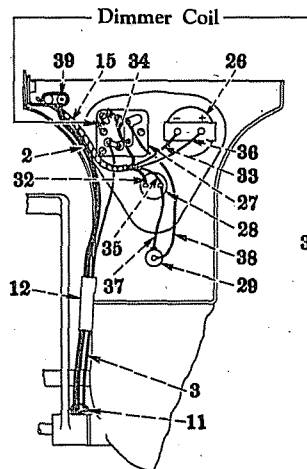

Battery Ignition

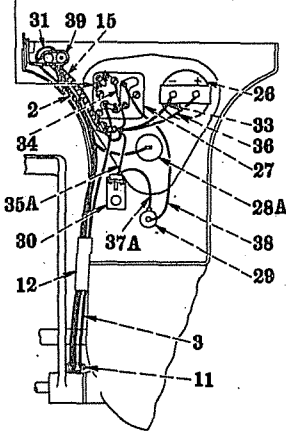

Magneto Ignition

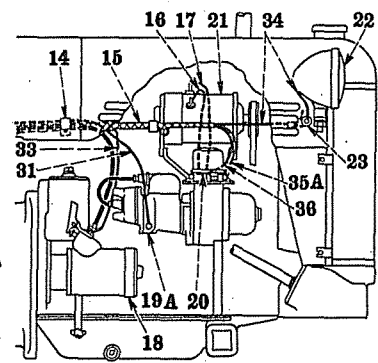

Magneto Ignition

Lighting Switch, Ammeter, Ignition Switch and Fuse Housing

B-4768B

ELECTRIC LIGHTING AND STARTING (Delco-Remy) (Special)

Reference numbers only are shown in illustration. Use I H part numbers in ordering. Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

