



Reference numbers only are shown in illustration. Use IH part numbers in ordering.

### CLUTCH HOUSING, CONTROLS AND CONNECTIONS

1	351 686 R21	HOUSING, CLUTCH, w/CORKS		1
	104 938	CORK, No. 2, 1/2 x 11/16"		4
	104 940	CORK, No. 4, 5/8 x 13/16"		9
	220 067	NUT, HEX., 7/16-14NC		4
	179 866	SCREW, CAP, HEX-HD., 7/16-14NC x 2"		2
	190 679	SCREW, CAP, HEX-HD., 7/16-14NC x 2-5/8"		4
	179 884	SCREW, CAP, HEX-HD., 1/2-13NC x 1-3/8"		2
	179 888	SCREW, CAP, HEX-HD., 1/2-13NC x 1-7/8"		4
	103 322	WASHER, LOCK, 7/16"		6
	103 323	WASHER, LOCK, 1/2"		6
2	351 486 R11	COVER, CLUTCH HOUSING HAND HOLE, w/NUT, 103 127 (ORDER 57 578 DX, 351 486 R1 AND 103 127)	501 to 13753	1
2A	57 578 DX	BAR, CLUTCH HOUSING HAND HOLE COVER	13754 UP	1
	103 127	NUT, WING, 1/4-20NC		1
2B	351 486 R1	COVER, CLUTCH HOUSING HAND HOLE	13754 UP	1
3	351 485 R2	COVER, CLUTCH HOUSING		1
	220 064	NUT, HEX., 1/4-20NC		4
	179 800	SCREW, CAP, HEX-HD., 1/4-20NC x 1-3/8"		4
	103 319	WASHER, LOCK, 1/4"		4
4	350 953 R1	LEVER, CLUTCH PEDAL		1
	179 844	SCREW, CAP, HEX-HD., 3/8-16NC x 1-5/8"		1
	103 321	WASHER, LOCK, 3/8"		1