


FINAL DRIVE

Removal

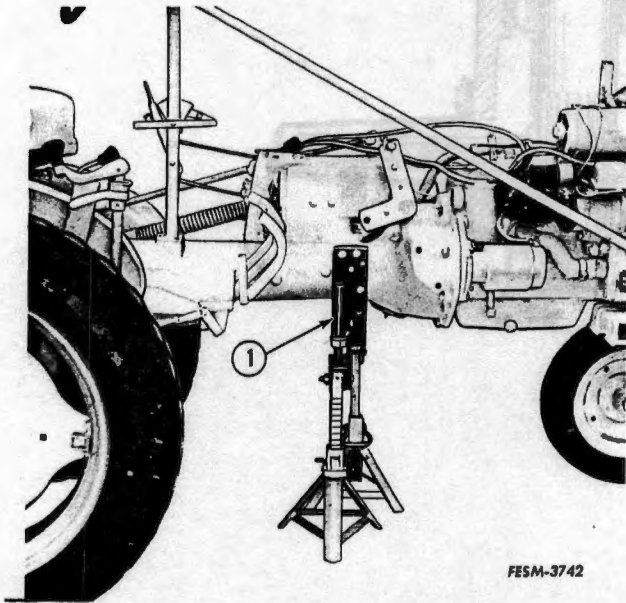


1. Block the front wheels so the tractor cannot move. Drive wooden wedges between the front axle and the tractor on both sides to stabilize the tractor.

2. Raise the rear of the tractor and support it with stands FES 142-1 (1).

3. Remove the rear wheels.

1. FES 142-1

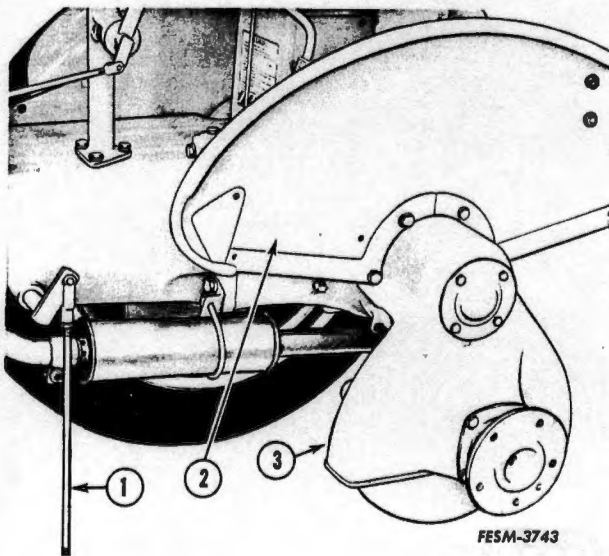

4. Disconnect the brake operating rods (1).

5. Remove the fenders (2).

6. Remove the drawbar or fast hitch assembly from the rear axle housings.

1. Brake operating rod
2. Fender
3. Final drive assembly