




ELECTRICAL SYSTEM

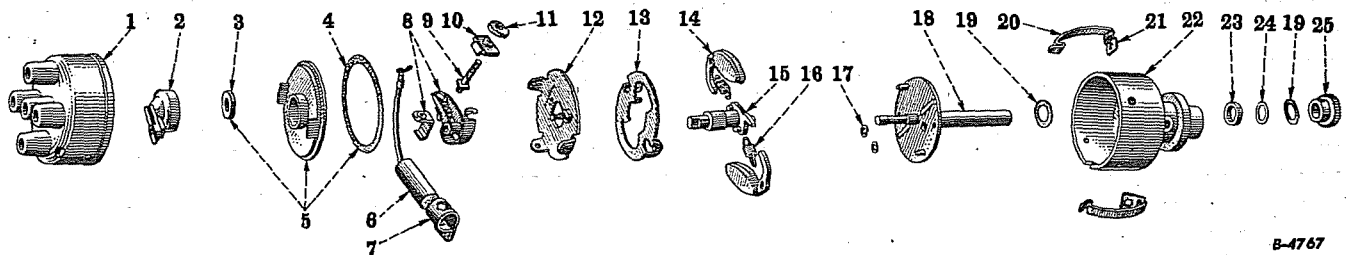

B-4767

Reference numbers only are shown in illustration. Use I H part numbers in ordering.
 Unnumbered parts in the illustrations are the same as corresponding parts shown with numbers.

BATTERY IGNITION DISTRIBUTOR (Special)

	353 893 R91	DISTRIBUTOR, ASSEMBLY	1
1	351 693 R91	CAP, DISTRIBUTOR	1
2	353 896 R91	ROTOR, DISTRIBUTOR	1
3	353 901 R2	SEAL, FELT, BREAKER COVER	1
4	352 284 R2	GASKET, BREAKER COVER	1
5	353 900 R11	COVER, BREAKER, w/SEAL, 353 901 R2 AND GASKET, 352 284 R2	1
6	353 903 R2	CONDENSER	1
7	353 905 R1	CLAMP, CONDENSER	1
	131 949	SCREW, MACHINE, SLOTTED-FIL-HD., CD-PLTD., No. 8-32NC x 3/16"	1
	121 841	WASHER, LOCK, CD-PLTD., No. 8	1
8	353 172 R91	PACKAGE, BREAKER ARM AND STATIONARY POINT	1
	436 690	SCREW, SLOTTED-PAN-HD., CD-PLTD., No. 8-32NC x 3/16"	1
9	353 907 R1	SCREW, TERMINAL	1
	120 622	NUT, HEX., CD-PLTD., No. 8-32NC	3
	121 841	WASHER, LOCK, CD-PLTD., No. 8	3